Assembly Instructions

Q43

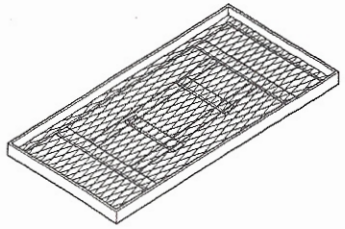

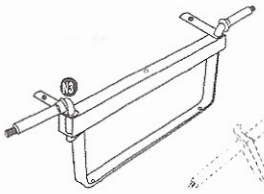

Front Axle Support
(1pc)

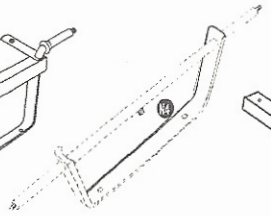

Rear Axle Support
(1 pc)

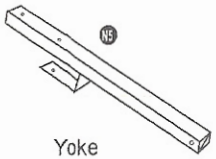

Yoke
(1 pc)

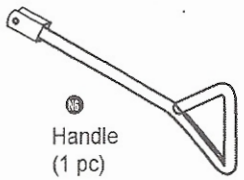

Handle
(1 pc)

Wheel
(4pcs)

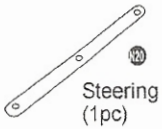

Steering link connector
(1pc)

Spring washer(4pcs)
Φ12MM

Bolt(2 pcs)
M8x15MM

Bolt(1 pc)
M8X60MM

Washer(11 pcs)
Φ8MM

Bolt(1 pc)
M8X40MM

Washer (4 pcs)
Φ12MM

Nut(12 pcs)
M8

Bolt(1 pc)
M8X90MM

Convex Nut(4pcs)
M12

Center Front Axle
Brace (2pcs)

IMPORTANT SAFETY INSTRUCTIONS

DO NOT inflate tries more than 40 psi.
DO NOT operate if any part is damaged or broken.
Lower fence rails when loading large items onto cart.
Distribute load evenly in cart bed.
DO NOT use on steep inclines where tipping may occur.
NOT FOR USE BY CHILDREN.

GARDEN CART

Owner's Manual

Save This Manual for Future Reference

CAUTION:

Read, understand and follow ALL instructions before using this garden cart.

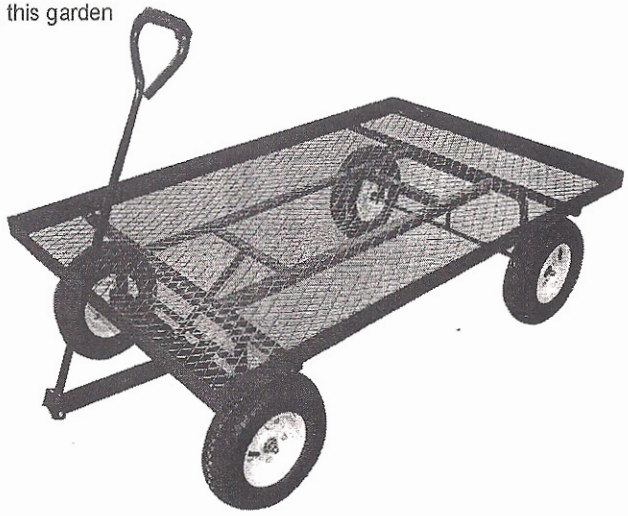

Important Safety Instructions

Assembly Instructions

Parts and Hdardware Identification

Assembly Instructions

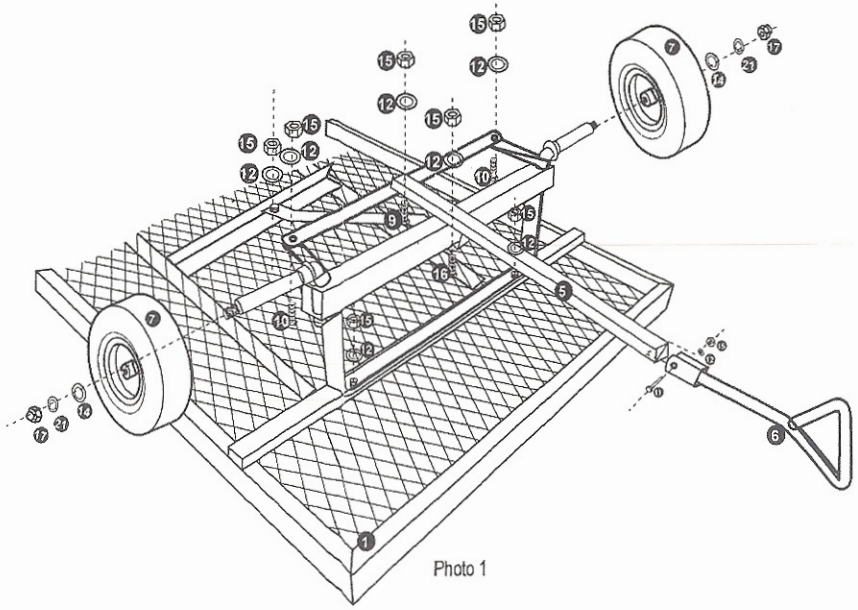

Photo 1

STEP 1(see Photo 1)

Turn the cart Bed(1) upside down.Use the cardboard from the carton to keep from scratichng or damaging the finish.

A.Turn up the foldable Front Axle Support(3) by 90 degree first, lock it with Hex Nut(15) and Washer(12).

B.Assemble the steering Link Connector(20) on the Front Axle Support(3) with Nut(15),Bolt(10) and Washer(12).Don't need to fasten tightly.

C.Place the Yoke(5) to the Front Axle Support(3).Put the long side of the yoke on the center of Steering link connector(20) with Nut(15) ,Bolt(9) and Washer(12),Put short side of Yoke on the stud of the Front Axle Support(3) , then put Center Front Axle Brace(18) on the short side of the Yoke(5),,then tighten these three parts with Bolt(16) and Nut(15),Washer(12),.

D.slide the Wheel(7) into the Axle with the valve steam facing out. Using Washer(14)(21) and Convex Nut(17) to fasten the Wheel(7).

E.Assemble the Handle(6) to the Yoke(5) ,use bolt(11),Washer(12) and Nut(15),tighten.

Assembly Instructions

Q43

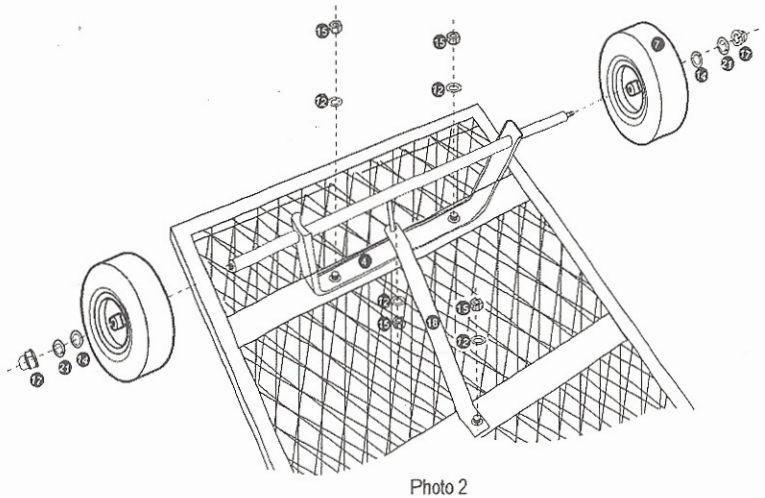

Photo 2

STEP 2(see Photo 2)

A. Turn up the foldable Rear Axle Support(4) by 90 degree and lock it with Hex Nut(15) and Washer(12)

B. Assemble Center Front Axle Brace(18) on Bed(1) and Axle on Rear Axle Support(4),with Nut(15) and Washer(12),then tighten.

C. Slide wheel(7) into the axle with valve steam facing out.Using Washer(14)(21) and Convex Nut(17) to fasten the Wheel(7).